

## INSTALLATION INSTRUCTIONS

### WPALED Series Adjustable LED Wall Pack

**WARNING!** Fixtures must be grounded and installed in accordance with the National Electrical Code and all local codes. Failure to do so may increase the RISK OF PERSONAL INJURY, PROPERTY DAMAGE, FIRE AND DEATH. Install and use so fixture failures do not cause a hazard and use only in environments for which the product is specifically marked.

**1. Introduction** This LED Wall-Packs light uses the latest in solid state lighting technology for long life, low maintenance, and high efficiency. An internal power-factor-corrected switch-mode supply allows it to be used from any nominal 120V-277V, 50/60Hz AC supply without any variation in light output. Suitable for use in the following locations:

- Ambient Temp: -40~+40°C
- Wet Locations

Note: Save these instructions for future reference.

**2. Installation: Warning:** To avoid the risk of fire, or electric shock, this product should be installed, inspected, and maintained by a qualified electrician only, in accordance with all applicable electrical codes.

**Warning:** To avoid electric shock:

- Be certain electrical power is OFF before and during installation and maintenance.
- Luminaire must be connected to a wiring system with an equipment-grounding

#### CAUTION:

**THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED MIN 90°C SUPPLY CONDUCTORS.**

### INSTALLATION- WALL MOUNT

Step 1. Open the fixture by rotating front cover 90 degrees. Loosen two screws and remove back plate.

Step 2. Secure the back plate to junction box by screws, put silicone glue to seal between the back plate and mounting surface, Ensure the back plate is pointed up (arrow ↑). See figure 1.

Step 3. Hang the fixture on the back plate. Connect wires into wiring terminal; white wire to "Neutral", black wire to "Live", green wire to "Ground"; and fix them by screws; connect the ground wire to the back plate. See figure 2.

Step 4. Close fixture, tighten 2 screws. Adjust fixture angle as needed. See figure 3.

Step 5. Remove the screws in the bottom of back plate for water drain. See figure 4.

FIG.1

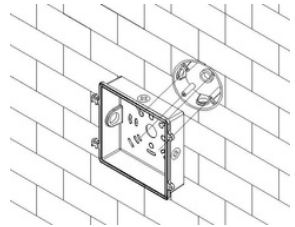


FIG.2

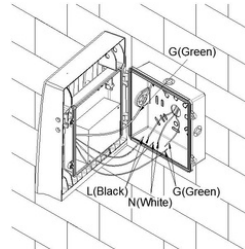


FIG.3

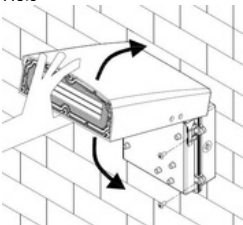


FIG.4

