


BOTTOM OF SLW LIGHT FIXTURE

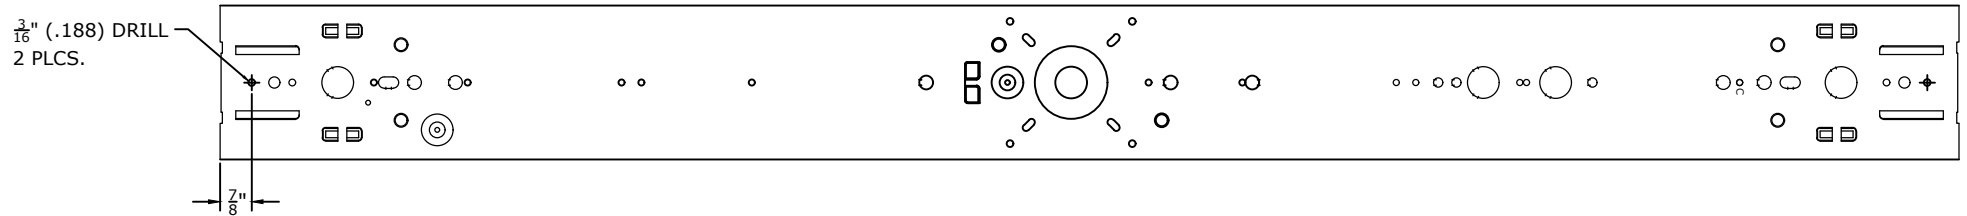

1. REMOVE COVER(S) AND ENLARGE EXISTING MOUNTING HOLES ON THE BOTTOM OF THE FIXTURE WITH A $\frac{3}{16}$ " DRILL BIT. (REMOVE END CAPS AND LENS IF YOUR FIXTURE HAS A LENS)
2. MOUNT PIVOT PORTION OF BRACKET TO BOTTOM OF LIGHT FIXTURE AND SECURE WITH (2) #10 PAN HEAD SCREWS AND (2) HEX NUTS ON BOTH ENDS OF FIXTURE.
3. RE-INSTALL END CAPS AND LENS ONTO THE FIXTURE.
4. POSITION FIXTURE WHERE IT IS TO BE MOUNTED AND MARK MOUNTING HOLES AS NEEDED.
5. DRILL MOUNTING HOLES AND SECURE FIXTURE TO WALL AS NEEDED.
6. ROTATE LIGHTING FIXTURE TO DESIRED ANGLE AND LOCK INTO POSITION WITH (4) EC-HEX SCREWS LOCATED ON BOTH SIDES OF THE STATIONARY WALL BRACKET.